

Shaw HDPVR.

Installation Instructions (Approximate hardware setup time: 10-15 minutes)

A: Do you have everything?

The following components are included in the package that your HDPVR came in:

Cable Cord (Coax)



Power Pack



HDMI Cable



IR Receiver + Tether Cord
(Optional Use)



Shaw Universal Remote



Motorola DCX 3510-M HDPVR




B: Time to hook up your new hardware

1. Your serial number, "Host SN," is located on the back of the HDPVR (next to the number three) and starts with the letter "M." Alternatively, you can find the serial number and account number on the white sticker labeled "S/N" on the HDPVR packaging.

Before you hook up your HDPVR, write your serial and account number below. You will need it when you contact us to activate your new hardware.


Serial Number:

2. Find a location to put your new hardware that will allow it to breathe.

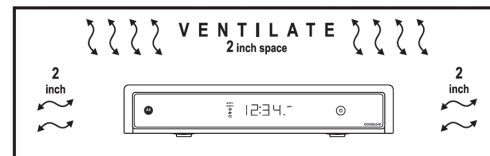


Account Number:


3. Screw one end of the included white cable cord (with silver ends) in to your wall cable outlet and the other end in to **CABLE IN** on the back of the HDPVR. For an optimal viewing experience, we recommend using the included cable cord instead of any others that you might have around.

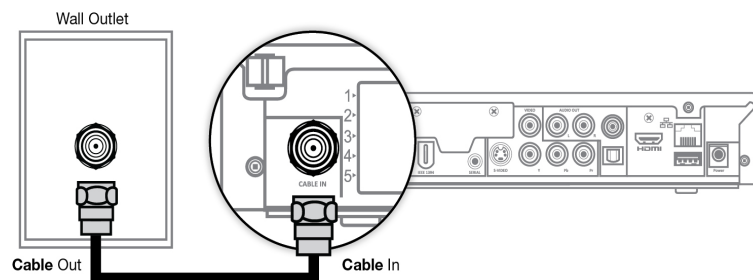

4. Connect the included HDMI cable (black cable with flat gold ends) from the HDPVR to your TV. Both video and audio travel through HDMI cable. Note the input you plug your HDMI cable into on the back of your TV (i.e. HDMI 1, HDMI 2, etc.). For more advanced audio/video setups, please refer to the manufacturer's guide included with your HDPVR.

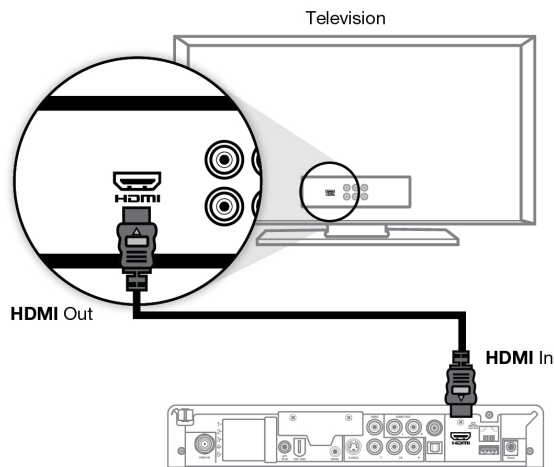

5. Connect the included power adapter from the wall power outlet to the HDPVR.

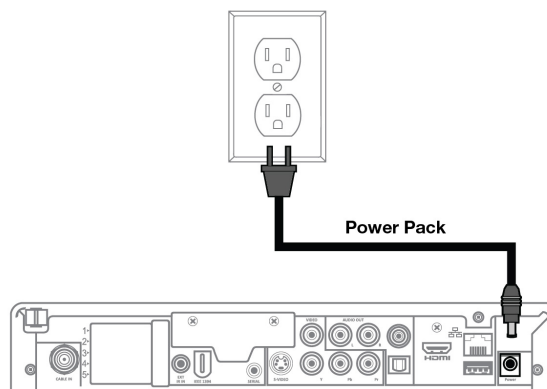

C: Turn on the power

1. Turn on your HDPVR by pressing the power button on the front of the box. After a couple of seconds the blue power indicator will light up to confirm the box has power. The display on the front of your HDPVR may display multiple messages once it is powered on, this is normal.



2. Select the High Definition (HD) input (i.e. HDMI 1, HDMI 2, etc.) that you plugged the HDPVR into in Step B-4. You may see a blue box appear on your TV, this is normal.

D: Now we just need to get your box activated

1. Go back to Step 3 on the shaw.ca/activations site and select "My digital box is now connected."